 


OWNER'S MANUAL

Smith Machine

ETENON
FITNESS

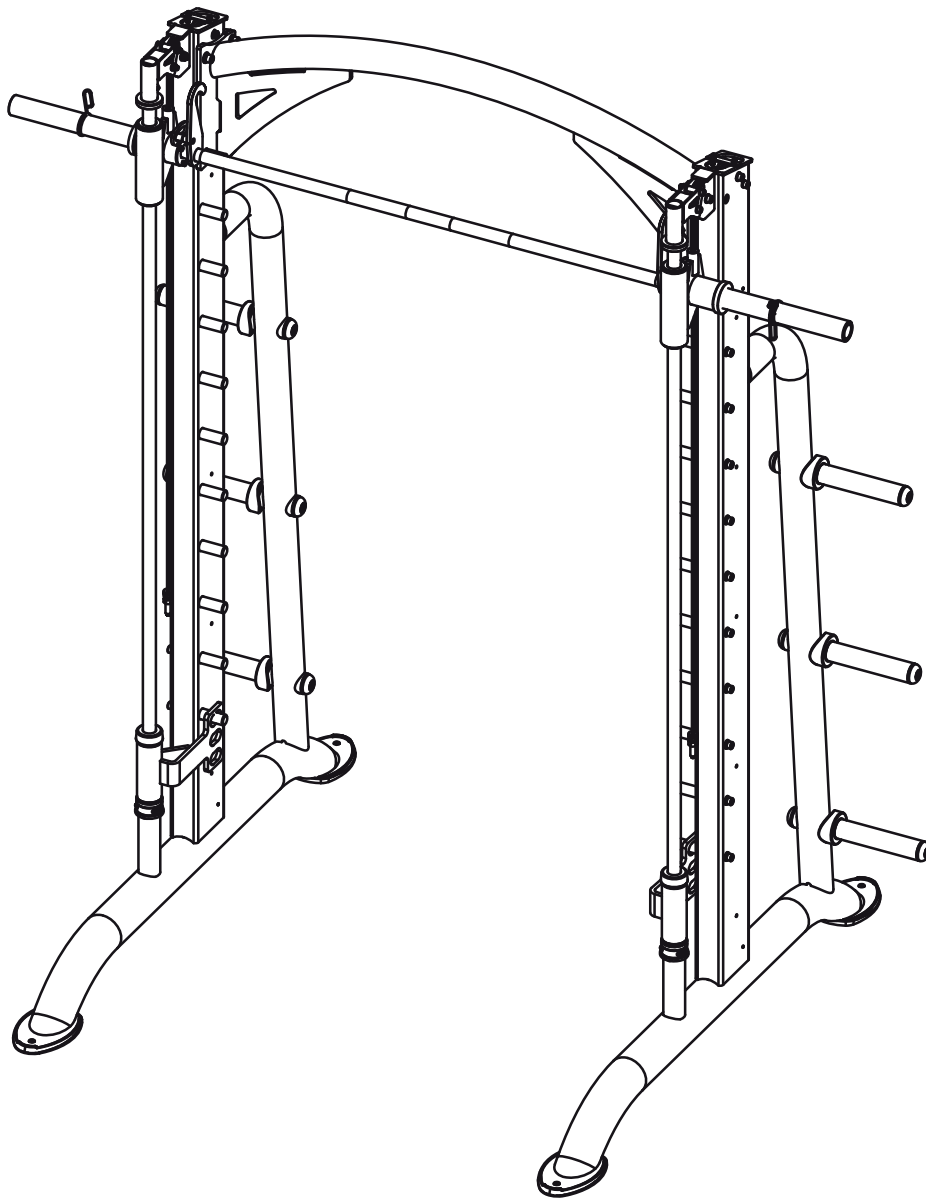

Cautions

In order to avoid human injuries and property damages, before the use of this series equipment, please read the following important notices.

1. Before use of the equipment please read this Owner's Manual carefully. The equipment should be assembled and used strictly following the relevant instructions in this manual, and can not change any of its components or disassemble it freely.
2. It should be ensured that all users have been fully aware of the safety warnings and precautions before they exercise on the equipment.
3. Too loose-fitting clothing can not be worn, and sports shoes should be put on while exercising.
4. The equipment should be carefully examined before training. If there is damage, please do not use it and do not try to repair it by yourself. Please contact your supplier in time. It is necessary to inform after-sales service personnel as soon as possible to get the machine repaired.
5. The equipment should be placed indoors, and make sure that the ground is flat, and there are enough space around the equipment for user to exercise on the machine freely.
6. Child and pet are not allowed to be too close to the equipment while it is in using.
7. If exerciser feels dizzy or physical pain while training he or she should stop exercising immediately and consult a doctor.
8. The equipment should be used in a well defined place and under well managed and monitored way of the equipment owner.

Before using the equipment please consult your physician and fitness expert, and must be sure to read all the specifications in this owner's manual. Manufacturer will not be held responsible for any personal injury and property loss resulted from the incorrect use of the products.

Fitting Instructions

1. When strip off the wrappage around the surface of equipment, should be careful, do not hurt the machine with knife scratches on the surface.
2. When moving this equipment, a sufficient number of personnel should be used to prevent the equipment from collision, or to avoid the injuries caused by personnel shortage.
3. Prior to installation of the equipment, make sure that all the parts are complete, no missing hardware.
4. When install the equipment, should have two or more persons working together to ensure the accurate location of parts assembly.
5. When install the equipment should pay attention to the assembly instructions to prevent component fitting to a wrong place or some components being omitted.
6. The suitable installation tools should be used to avoid the equipment damages or human injuries caused by the use of inappropriate tools in the installation process.
7. If need to move equipment, the movement must be after the completion of installation. The equipment can not be moved when the installation process hasn't finished or locking nut hasn't been tightened up.
8. Attention should be paid to the sequence of fastening locking nut, when the overall installation of the equipment is not finished, should not tighten up the nut that is being installed. After the whole machine is properly fitted together, the locking nuts can be tightened up one by one.
10. After the completion of installation, start the initial trial of the equipment with gentle force. Make certain that the equipment is without any abnormality before normally use the machine. If something unusual is found with the equipment that, it is necessary

to check the equipment carefully, identify the problems and reinstall it.

Warranty

***Ten years: Main Frames**

 
***One year: Bushings, Pivot bearings, guide rods, Weight plate, cams, swivel welding parts, Pull-pin components**

***Half year: Finish, rubber grips, belt, cables.**

***Three Months: upholstery**


Assembly step 1

Steps	No.	Description	Specifications	Qty
1	1	Left upright		1
	2	Right upright		1
	3	Transverse connecting frame		1
	13	Short hook column		2
	39	Hex socket head cap screw	M12*110	2
	40	Hex socket head cap screw	M12*35	6
	49	Spring washer	M12	8
	52	Plain washer	Φ24*Φ13*2.5	2
	56	Large washer	Φ37*Φ13*3	6

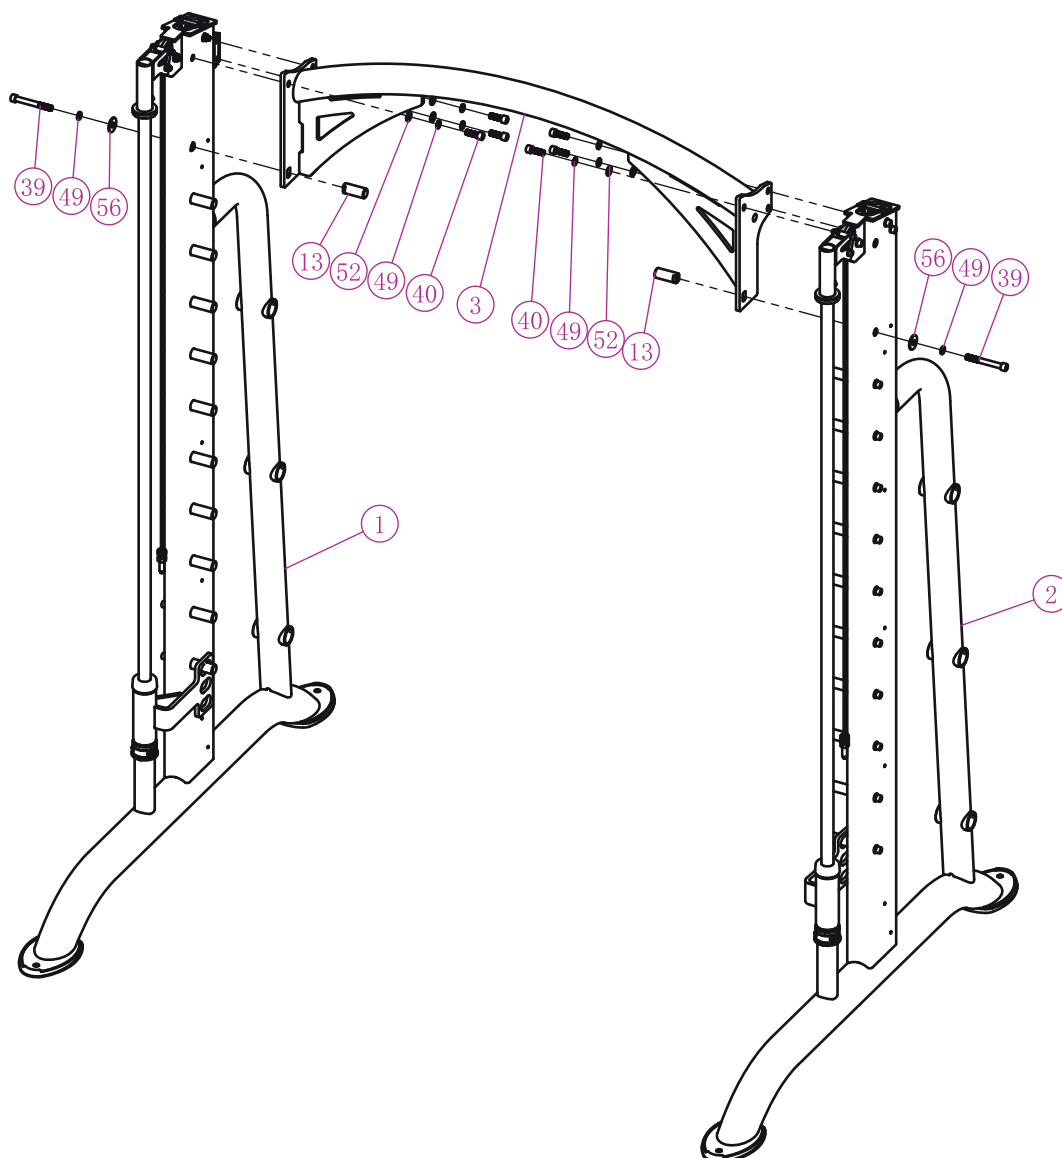


Assembly step 2

Steps	No.	Description	Specifications	Qty
2	14	Barbell pipe		6
	25	Pipe plug		12
	45	Hexagon socket button head screw	M6*25	12
	48	Hexagon socket set screws with flat point	M6*6	20
	51	Spring washer	M6	26
	55	Extra large washer	Φ22*Φ6.6*2	12

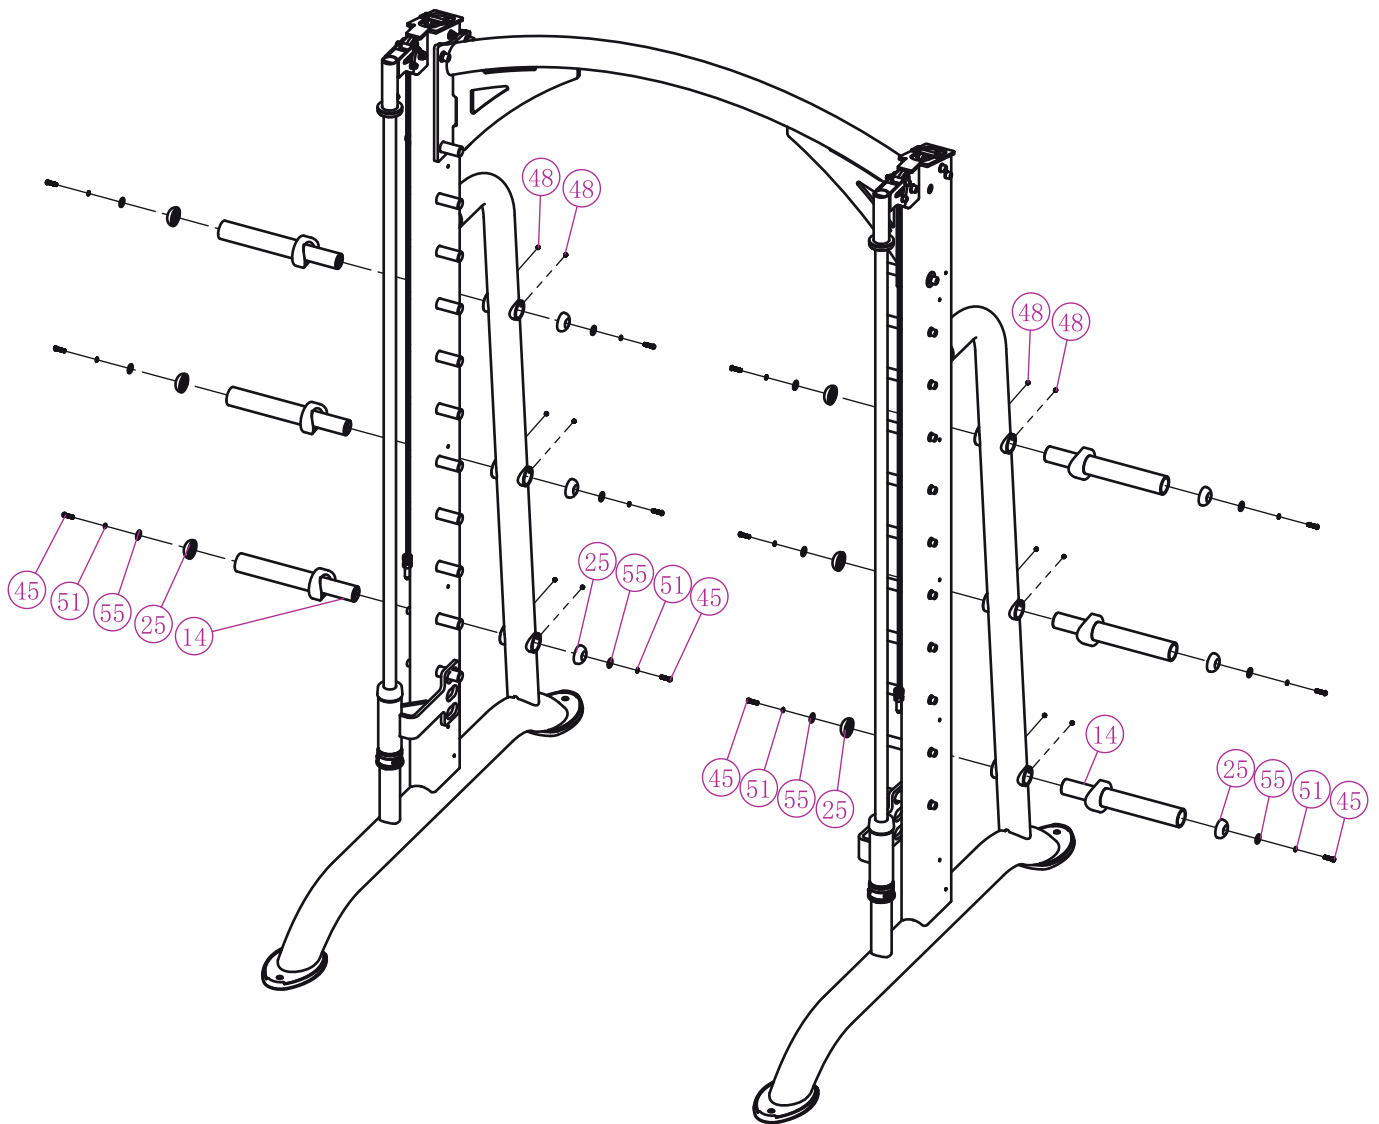 


Assembly step 3

Steps	No.	Description	Specifications	Qty
3	4	Hexagon socket button head screw		1
	5	Hexagon socket set screws with flat point		1
	6	Spring washer		1
	8	Extra large washer		2
	22	Rubber bushing		2
	26	Protective mats		4
	27	Rubber bumper		2
	44	Hex socket head cap screw	M8*55	4
	46	Hex socket head cap screw	M6*20	14
	51	Spring washer	M6	26
	54	Plain washer	$\Phi 16*\Phi 8.4*1.6$	8
	58	Nylon insert lock nut	M8	4

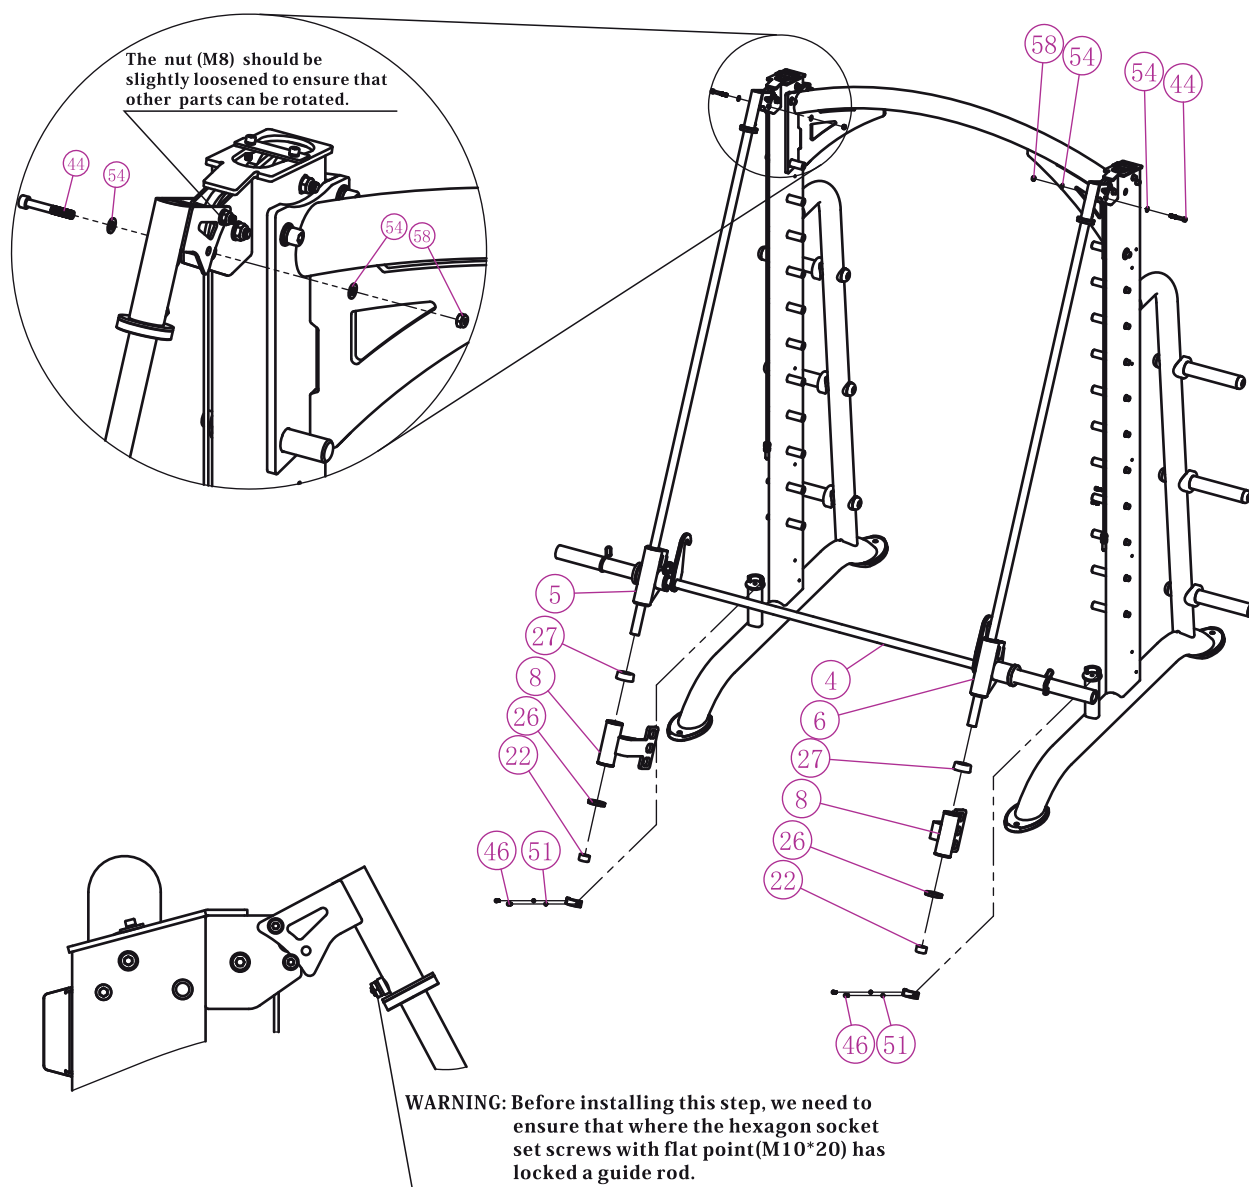 


Assembly step 4

Steps	No.	Description	Specifications	Qty
4	5	Left Barbell rack		1
	6	Right Barbell rack		1
	31	Cable set		2

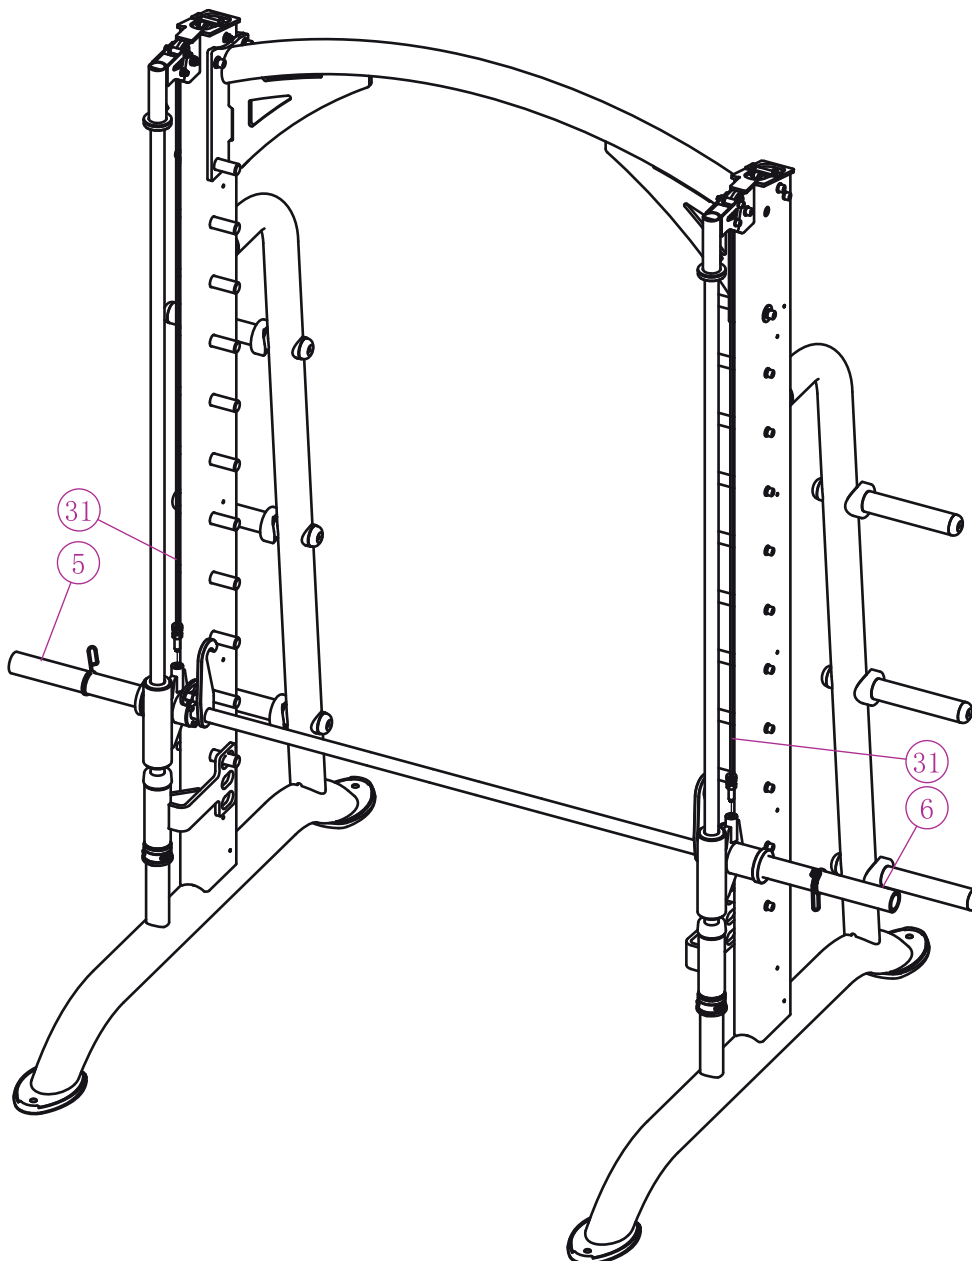 

Exploded View

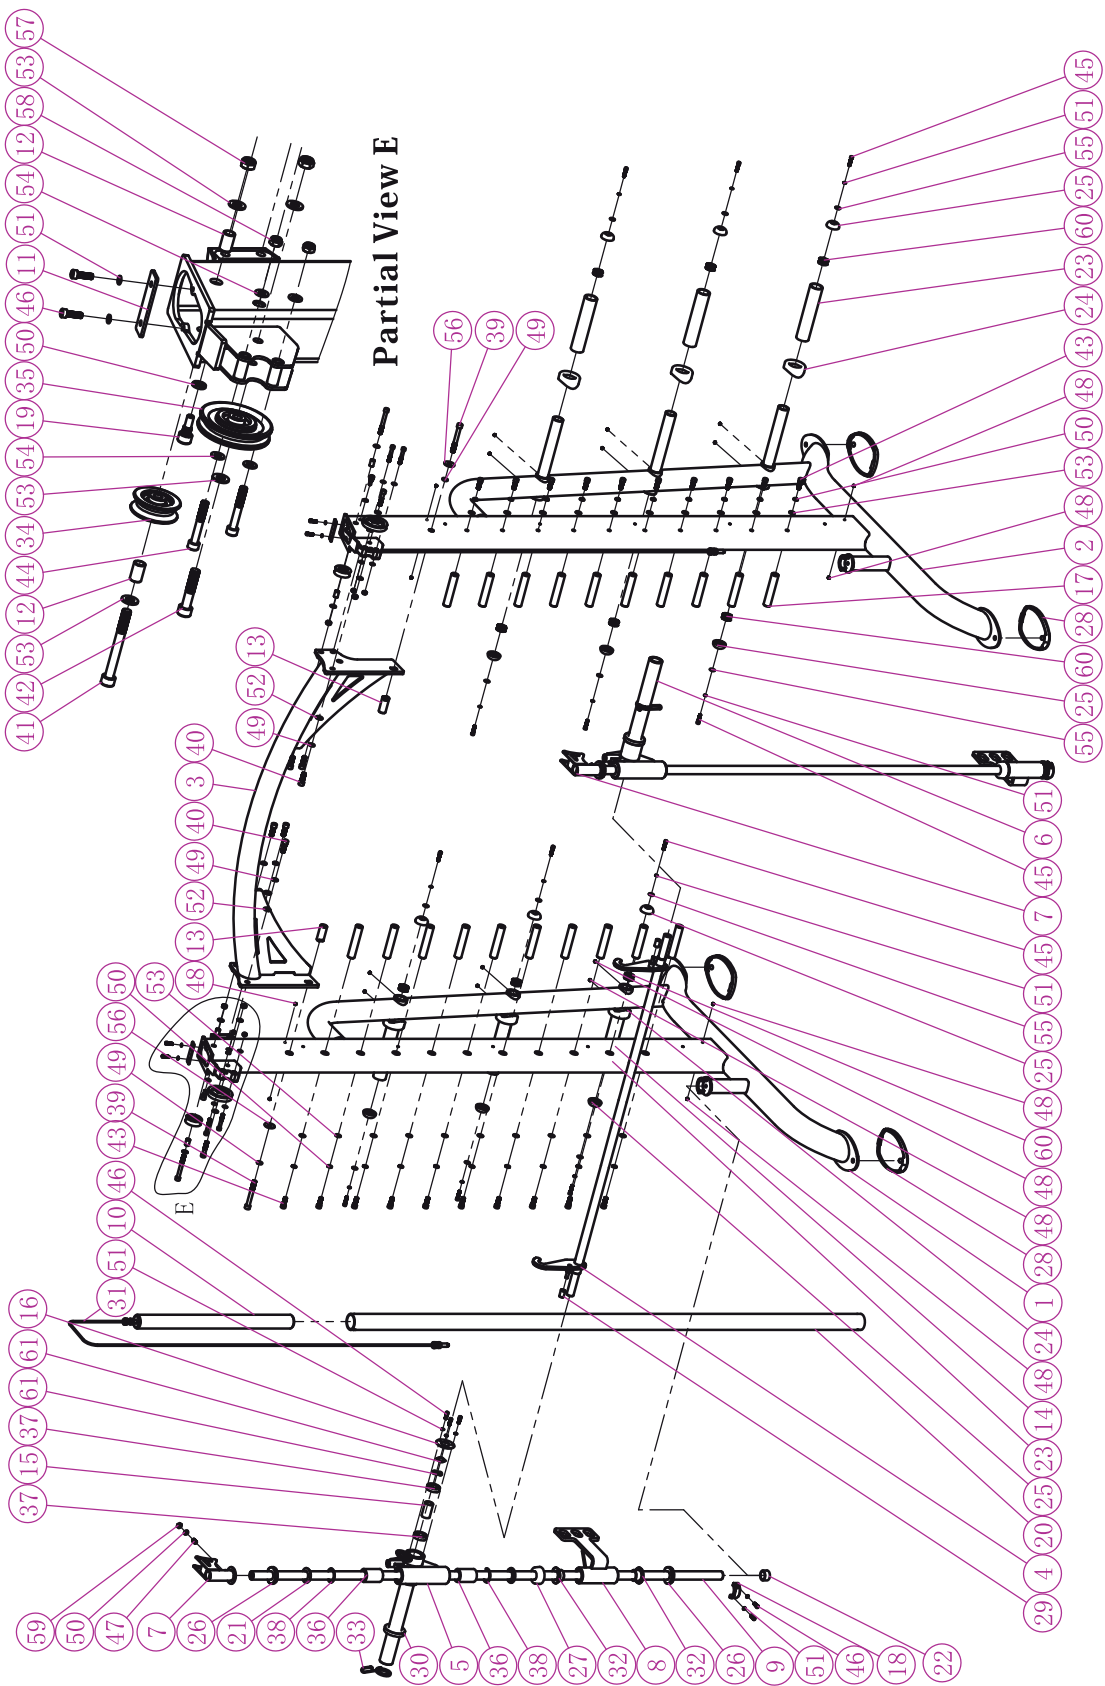 

Exploded List

No.	Description	Specifications	Qty
1	Left upright		1
2	Right upright		1
3	Transverse connecting frame		1
4	Barbell set		1
5	Left Barbell rack		1
6	Right Barbell rack		1
7	Guide rod holder		2
8	protecting rack		2
9	Guide rod		2
10	Counter weight		2
11	Baffle		2
12	Locating tube		2
13	Short hook column		2
14	Barbell pipe		6
15	Bearing retaining ring		2
16	Ring cover		2
17	Hook column		20
18	Rod fixing ring		2
19	Limiting screw		2
20	Sliding tube		2
21	End cap		4
22	Rubber bushing		2
23	Protecting jacket		6
24	Barbell bushing		6
25	Pipe plug		12
26	Protective mats		4
27	Rubber bumper		2
28	Rubber mat		4
29	Limiting bushing		2
30	Rubber bumper		2
31	Cable set		2
32	Metallurgy cover		4
33	Spring bracket		2
34	Aluminum pulley		2
35	Aluminum pulley		2
36	Linear bearing	$\Phi 30 \times \Phi 47 \times 68$	4
37	Deep groove ball bearing	6005-2Z	4
38	Circlips for hole	d0=47	4
39	Hex socket head cap screw	M12*110	2
40	Hex socket head cap screw	M12*35	6
41	Hex socket head cap screw	M10*90	2
42	Hex socket head cap screw	M10*50	2

Exploded List

No.	Description	Specifications	Qty
43	Hex socket head cap screw	M10*30	20
44	Hex socket head cap screw	M8*55	4
45	Hexagon socket button head screw	M6*25	12
46	Hex socket head cap screw	M6*20	14
47	Hexagon socket set screws with flat point	M10*20	2
48	Hexagon socket set screws with flat point	M6*6	20
49	Spring washer	M12	8
50	Spring washer	M10	24
51	Spring washer	M6	26
52	Plain washer	Φ 24*Φ 13*2.5	6
53	Plain washer	Φ 20*Φ 10.5*2	28
54	Plain washer	Φ 16*Φ 8.4*1.6	8
55	Extra large washer	Φ 22*Φ 6.6*2	12
56	Large washer	Φ 37*Φ 13*3	2
57	Nylon insert lock nut	M10	4
58	Nylon insert lock nut	M8	4
59	Hexagon thin nut	M10*5	2
60	Reed nut	M6*Φ 33.8*15	12
61	Wave spring washer	Φ 34*Φ 25.5*0.3	4
62			
63			
64			
65			
66			
67			
68			
69			
70			
71			
72			
73			
74			
75			
76			
77			
78			
79			
80			
81			
82			
83			
84			

Maintenance Attentions

Daily Maintenance (Basic Maintenance)

1. Clean the seat pad, back pad and cushion with warm water and soft cloth in order to avoid the sweat erosion to these component.
2. Clean the frame with warm water and soft cloth.
3. Cleaning chrome plated parts: wipe them with alcohol moistened soft cloth.

Further Maintenance

1. Check whether bolts on basic frame become loose, springs have damaged and the tightness of drive cable.
2. Check, if there is rust or paint loss on main frame and basic rack, clean out rust by sand paper, and then cover it with same color paint from the same supplier.
3. Clean and lubricate every bearing, and keep equipment work smoothly.
4. Check whether the rubber gasket is broken.
5. Check bolts and fixing parts. Wipe them with alcohol and anticorrosive oil.